

Installation Instructions for Slotted Strip Kits: - Welded Center Pans -

Step #1 NOTE-If you have purchased a Pan Liner you must insert the liner before installing the Slotted Strip Kit.


Verify that the surface to be adhered to has been cleaned and is completely dry and free from dust before application. Peel the paper backing off of the adhesive strip on the front and back panels. Install the front and back panels to your pan by applying pressure and holding for a few seconds.

(Note: Kits for a pan with a welded center divider will have a LH and RH to your front and back panels.)

Step #2

(4 or 6) Partitions are included with your Slotted Strip Kit.

- Place one Partition in the last slot on each side of your pan. If your kit requires one-sided Partitions; place (1) one-sided Partition in the last slot on each side of your pan. If your pan does not require the use of a one-sided style Partition then place (1) double-sided Partition in the last slot on each side of your pan.
- Place one Double Sided Partition on each side of the welded center

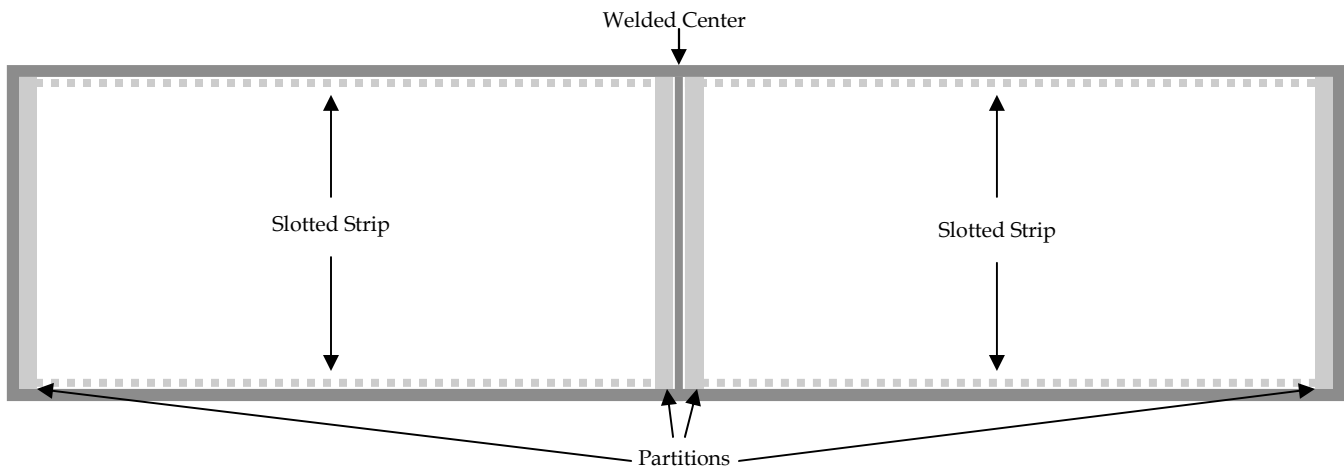

Now you are ready to fill your pan with Partitions and Cross Dividers to complete your Divider System.