

Installation Instructions for Slotted Strip Kits:

Our Slotted Strip Kits, which are pan wall height, are manufactured with a “Peel-n-Stick” design for a simple installation.

Follow the steps to assure secure assembly.

Step #1 **NOTE-If you have purchased a Pan Liner you must insert the liner before installing the Slotted Strip Kit.**


Verify that the surface to be adhered to has been cleaned and is completely dry and free from dust before application.

Peel the paper backing off of the adhesive strip on the front and back panels.

Install the front and back panels to your pan by applying pressure and holding for a few seconds.

Step #2

(2) Partitions are included with your Standard Slotted Strip Kit to be utilized as sides. If your kit requires one-sided Partitions; place (1) one-sided Partition in the last slot on each side of your pan. If your pan does not require the use of a one-sided style Partition then place (1) double-sided Partition in the last slot on each side of your pan.

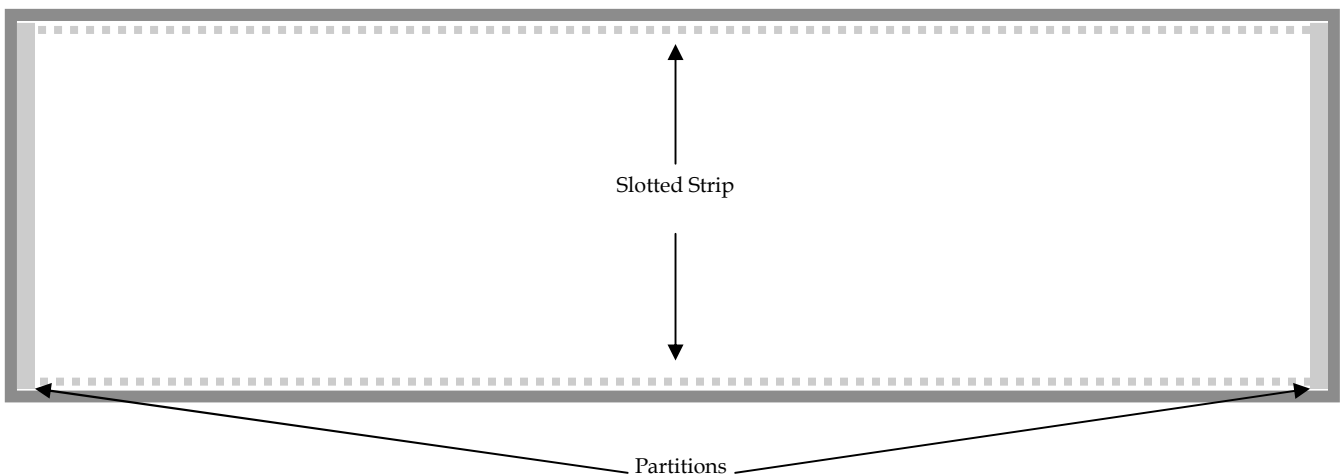

Now you are ready to fill your pan with Partitions and Cross Dividers to complete your Divider System.